

Dryer Quick Start Guide

This document is to be used with the appropriate
Installation/Operation Manual on the enclosed CD.

To access additional safety information, installation instructions, maintenance and
other product information, insert the enclosed CD into a computer CD drive and follow the on-screen instructions.

Safety Information



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your dryer, follow these basic precautions:

W034

IMPORTANT SAFETY INSTRUCTIONS

 
NOTE: Refer to Installation/Operation Instructions, located on enclosed CD, for additional warnings.

1. Read all instructions before using the dryer.
2. Refer to the **GROUNDING (EARTHING) INSTRUCTIONS** in the installation manual for the proper grounding (earthing) of the dryer.
3. Do not dry articles that have been previously cleaned, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
4. Do not allow children to play on or in the dryer. Close supervision of children is necessary when the dryer is used near children. This is a safety rule for all appliances.
5. Before the dryer is removed from service or discarded, remove the door to the drying compartment.
6. Do not reach into the dryer if the cylinder is revolving.
7. Do not install or store the dryer where it will be exposed to water and/or weather.
8. Do not tamper with the controls.
9. Do not repair or replace any part of the dryer, or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
10. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
11. To reduce the risk of fire, **DO NOT DRY** plastics or articles containing foam rubber or similarly textured rubberlike materials.
12. **ALWAYS** clean the lint filter after every load. A layer of lint in the filter reduces drying efficiency and prolongs drying time.
13. Never operate the dryer with any guards and/or panels removed.




Operating Dryer

1 Clean Lint Filter

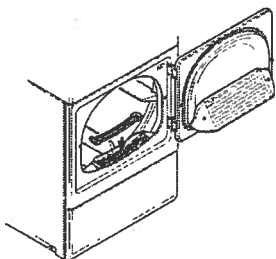


DRY2327N

 5 Set Fabric Selector

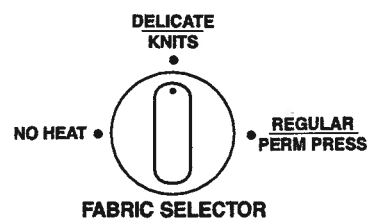


DRY697N

 2 Load Laundry

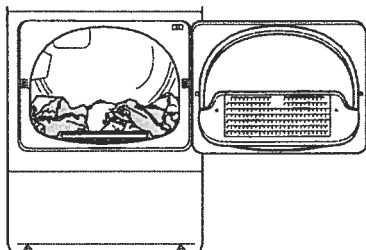


DRY2326N

 6 Select Cycle

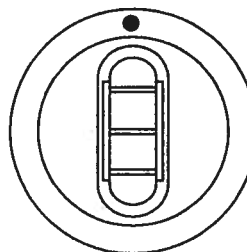

TLW2107N

 
3 Close Loading Door

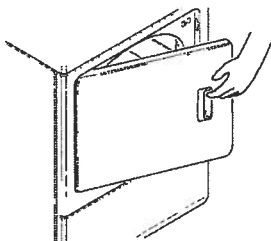

DRY2324N

7 Push Timer Knob In to Start

 4 Stacked Models – Determine Proper Control

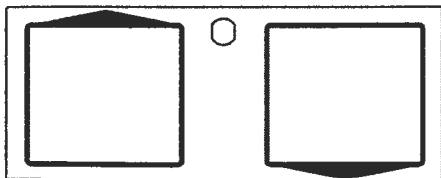

DRY2315N